Alcatel **Mobile Reflexes™**

Alcatel **OmniPCX** *Enterprise*

ALCATEL

ARCHITECTS OF AN INTERNET WORLD

User manual

Thank you for choosing this **Alcatel Mobile 100** or **200 Reflexes** telephone: it is a reliable telephone designed to make life easier for you.
To find out the essential functions of the **Mobile 100** or **200**, we suggest that you read carefully the first chapters of this manual.
The availability of some of the functions described in this guide may depend on your system version or configuration.
If you are in doubt, consult your system supervisor.

Contents

Precautions for use . . . . . **p. 5**

Your telephone . . . . . **p. 7**

1. Display and corresponding icons . . . . . **p. 8**
1.1 Status icons . . . . . p. 8
1.2 MENU icons . . . . . p. 9
1.3 Call icons . . . . . p. 10
1.4 How to use this manual? . . . . . p. 10
1.5 How to use your telephone . . . . . p. 11

2. Getting started . . . . . **p. 12**
2.1 Installing the battery in the telephone . . . . . p. 12
2.2 Charging your telephone battery . . . . . p. 13
2.3 Switching on your telephone . . . . . p. 13
2.4 Accessing the MENU and navigating . . . . . p. 14

3. Using your telephone . . . . . **p. 15**
3.1 Making a call . . . . . p. 15
3.2 Answering a call . . . . . p. 16
3.3 Calling from your personal directory . . . . . p. 16
3.4 Calling your correspondent by name (phone book) . . . . . p. 17
3.5 Calling back one of the last 6 numbers dialled (Redial) . . . . . p. 17
3.6 Making a call-back request . . . . . p. 17
3.7 Calling a correspondent on his loudspeaker . . . . . p. 18
3.8 Leaving a voice message . . . . . p. 19
3.9 Leaving a text message . . . . . p. 19
3.10 Overriding a forwarded call . . . . . p. 20
3.11 Using hands-free mode . . . . . p. 20
3.12 Sending DTMF signals . . . . . p. 21
3.13 Camp-on when a correspondent is busy . . . . . p. 21
3.14 Intrusion into a conversation . . . . . p. 22
3.15 Calling a private external number . . . . . p. 22
3.16 Allocating your calls to customer account codes . . . . . p. 23
3.17 Placing an external correspondent on hold (parking) . . . . . p. 23
3.18 Reporting malicious calls . . . . . p. 24

4. Handling several calls . . . . . **p. 25**
4.1 Calling a second correspondent (enquiry call) . . . . . p. 25
4.2 Answering a second call during a conversation . . . . . p. 26
4.3 Switching between calls (broker call) . . . . . p. 27
4.4 Transferring a call . . . . . p. 28

4.5 Three-way conference with 2 internal and/or external correspondents (3-way conference) . . . . . p. 29
4.6 Camp-on busy control . . . . . p. 30
4.7 Forwarding calls when you are busy . . . . . p. 31

5. Customizing and adjusting your telephone . . . . . p. 32
5.1 Choosing the language . . . . . p. 32
5.2 Programming your personal directory . . . . . p. 32
5.3 Programming your own password . . . . . p. 34
5.4 Programming your associate number . . . . . p. 35
5.5 Programming your overflow number . . . . . p. 35
5.6 Customizing the ringer . . . . . p. 36
5.7 Activating the vibrator or ringer (Mobile 200) . . . . . p. 37
5.8 Using the loud-speaker . . . . . p. 37
5.9 Adjusting your telephone functions . . . . . p. 38
5.10 Adjusting screen contrast . . . . . p. 38
5.11 Identifying the telephone you use . . . . . p. 39
5.12 Using the list of functions . . . . . p. 39
5.13 Programming an appointment reminder . . . . . p. 42
5.14 Hiding your identity . . . . . p. 43
5.15 Do not disturb function . . . . . p. 43
5.16 Finding out the cost of your external calls . . . . . p. 43
5.17 Locking your telephone . . . . . p. 44

6. While you are away - When you return . . . . . p. 45
6.1 Forwarding calls . . . . . p. 45
6.2 Forwarding calls to another number (immediate forwarding) . . . p. 45
6.3 Other types of call forwarding . . . . . p. 47
6.4 Remote forwarding of calls (immediate forwarding) . . . . . p. 48
6.5 Forwarding calls to your voice mail service (immediate forwarding) p. 49
6.6 Cancelling all forwarding functions . . . . . p. 50
6.7 Forwarding calls to an associate number (overflow) . . . . . p. 51
6.8 Consulting the messages left while you were away . . . . . p. 51
6.9 Calling back the last internal caller . . . . . p. 54

7. Group operation . . . . . p. 55
7.1 Answering the general bell . . . . . p. 55
7.2 Call pick-up . . . . . p. 55
7.3 Hunting groups . . . . . p. 55
7.4 Sending a text message to an internal correspondent . . . . . p. 56
7.5 Supervising a terminal . . . . . p. 58

8. MANAGER/SECRETARY filtering set . . . . . p. 59
8.1 Manager terminal . . . . . p. 59
Calling a secretary directly . . . . . p. 59
Activating call filitering . . . . . p. 59
Picking up the filtered calls . . . . . p. 61

Listening "discreetly" to a filtered conversation . . . . . P. 62
8.2 Secretary's terminal . . . . . p. 62
Calling a manager directly . . . . . p. 63
Signalling your absence on the manager's terminal . . . . . p. 63
Managing the filtered calls . . . . . P. 64
Managing call filtering in place of the manager . . . . . p. 64

9. Registering the telephone . . . . . p. 66
9.1 Registering the telephone on a system for the first time . . . . . p. 66
9.2 Registering the telephone on other systems . . . . . p. 67

10. Accessories . . . . . p. 70
10.1 Chargers . . . . . p. 70
10.2 Characteristics of the mains power adapter . . . . . p. 71
10.3 Battery . . . . . p. 71
10.4 Charging the extra battery (on the "Dual" support) . . . . . p. 72
10.5 Headphone / external microphone . . . . . p. 72
10.6 Cleaning your telephone . . . . . p. 72
10.7 Transporting and protecting your telephone . . . . . p. 72

11. MENU tree-structure . . . . . p. 73

12. Glossary . . . . . p. 75

13. Index . . . . . p. 77

Precautions for use

Coverage zone:

The DECT functions provided by your Alcatel OmniPCX Enterprise system allow user mobility management via DECT cordless telephones.

The radio coverage of the **ALCATEL** system is ensured by a network of base stations. The zone covered by a base station is called a cell.

- **Mobility:**
  A user can make or receive calls in any cell.
- **Radio transfer:**
  This function enables the user to move during a conversation and go from one cell to another. The transfer takes place automatically and has no effect on the conversation. In some cases, slight crackling may be audible at the moment of transition.

Using an approved DECT standard telephone:

This approved DECT telephone is intended to be used with an Alcatel cordless PBX.

The CE marking indicates that this product complies with the European Community directives in effect, and the following directives in particular:

- 89/336/CEE (electromagnetic compatibility)
- 73/23/CEE (low voltage)
- 1999/5/CE (R&TTE)

Pursuant to directive 1999/5/CE (R&TTE) published in the Official Journal of the European Community of April 7, 1999, these items of equipment use the DECT harmonized frequency spectrum and can be used in all the countries of the European Community, in Switzerland and Norway.

No guarantee is given concerning possible interference affecting DECT equipment, due to other authorised utilisation of the radio frequencies concerned.

Conditions of use:

The following conditions must be respected, notably concerning the use of radio frequencies:

- DECT equipment can only be used to establish links between fixed points if these links are temporary and the equivalent isotropically radiated power at the antenna is less than 250 mW.
- The conditions of access to a DECT equipment telepoint network shall be stipulated by contract with the operator of the authorized telepoint network concerned.
- This telephone is specially designed for use with an **Alcatel OmniPCX Enterprise** system as described in the guide.
- As this telephone complies with the GAP standard, it can be used in simplified mode on another DECT/GAP system (other PABX or private residential base station). Utilization in GAP mode involves a particular mode of operation that can lead to functional limitations for which no claims will be considered under the terms of the guarantee.
- Do not expose your telephone to severe conditions (rain, sea air, dust, etc.).
- Correct operation of your telephone is not guaranteed in temperatures outside the range - 10 °C to + 45 °C.

  Between - 5 °C and - 10 °C, the display may not be visible, but this is temporary and will not affect the operation of your telephone.
- You must not switch on or use your telephone near gas or inflammable liquids.

Your telephone

Headphone connector

Light indicating:
- Going out of radio coverage (fast flashing)
- New message:
  - green Mobile 100
  - red Mobile 200 (slow flashing)

- **Adjust audio volume**

- **Display previous menu**
- **Erase last character entered**
- **Erase complete field** (long press)

- **Access to the MENU**
- **Navigate**
- **Confirm**

- **Hang up**
- **Return to idle**
- **Lock/unlock the keypad** (long press)

- **Off-hook**
- **Redial** (long press)
- **Switching between calls** (during enquiry call)

- **Activate / deactivate vibrator** (long press)*

- **Company directory**
- **Telephone ID** (long press)

- **Activate/deactivate loudspeaker**
- **Activate the secret on hands-free charger**

- **Microphone**

* depending on your model of telephone

- **On / Off** (long press)
- **Access to the On/Off menu** (1st press) to switch off the telephone, activate/disable the vibrator, activate/disable the ringer, lock the keypad

1. Display and corresponding icons

The display features 1 line of status icons and 3 lines of 16 alphanumerical characters.
The **Mobile 200** also features a display and backlit keypad.

1 1. *Status icons*

The status icons are displayed on the welcome screen and indicate the status of the telephone.

Battery charge level

Messages received:
voice and text messages, call-back requests and unanswered calls

Calls received that have remained unanswered (if no other types of message)

Call forwarding activated

Ringer active

Vibrator active (Mobile 200)

Ringer disabled

Programmed call-back time

Radio reception quality

You can obtain details on the status icons from the tooltips that appear on the welcome screen when you use the navigator:

Press the C key to make these tooltips disappear.

2. MENU icons

The MENU is accessible from the welcome screen by pressing the OK key.
It provides access to all the functions available on your system.

Directories:
manage your personal directory and access the company directory.

Redial:
call back one of the last 6 numbers dialled.

Forwarding:
forward your calls to another number.

Mail:
consult the messages and send voice and text messages.

Manager/secretary*

Supervision*

Adjustment:
adjust contrast, activate or deactivate the beeps, lighting, etc.

Guide :
Programming, list of functions…..

Selecting the language

Adjusting the ringer

Appointment:
program a call-back time.

System lock:
prohibit outgoing calls and modification of the programming.

System selection

Installation (installation reserved)

* These icons are only proposed if the corresponding functions are installed.

1 3. *Call icons*

Making a call

Answering a call*

In conversation*

Call on hold*

Accessing the directories

Transferring a call

Switching to DTMF signals

Setting up a conference

Additional options

Call duration and cost

* In the event of a multiple call, the icons are given indices to represent the different correspondents

1 4. *How to use this manual?*

Press briefly on the navigation key to access the MENU and to confirm.

Move the navigation key up or down.

Move the navigation key to the left or right.

Use the keypad to enter digits and letters.

Important information.

These symbols can be supplemented by small icons or texts.
All the implicit or personalized codes are presented in a table of codes provided with the telephone.

You can access the options proposed by your system when in the various operating phases in several ways, by using:

- the list of icons at the top of the screen
- the list of options at the bottom of the screen

Some functions are only accessible from the text menu options.

Example of options that can be proposed during a conversation:

Conference
Directories
Send MF
Supervis List
Boss List
Assistant List
Enquiry Call
Forbid Camp On
Call Duration

① Call in progress
② Situation of second call (reception of a call or call on hold)
③ Transfer
④ Conference
⑤ Directories
⑥ MF
⑦ Supervision
⑧ Manager/secretary
⑨ Other options
⑩ Call duration

Select an icon or an option from the text menu then confirm OK

2. Getting started

2 1. *Installing the battery in the telephone*

- **Installing the battery:**

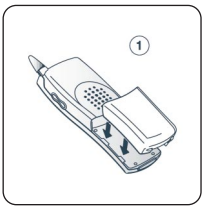

Position the battery in the slide following the mark on the label

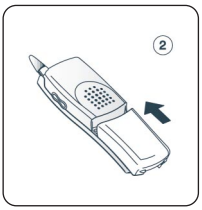

Slide it until it clicks into place

- **Removing the battery:**

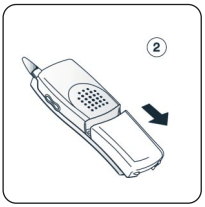

Slide the battery towards the bottom of the telephone

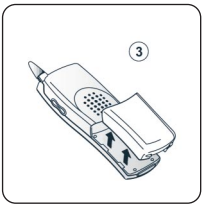

Remove it from the slide

The **Mobile 100** functions exclusively with the Ni-Mh battery, and the **Mobile 200** with the Li-Ion battery.

2 2. Charging your telephone battery

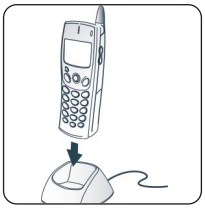

Connect the charger and place the telephone in the charging holder

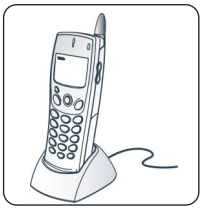

Battery being charged*
The green light is on and the battery icon is displayed

Recharge your telephone battery regularly. The telephone can be on or off when recharging the battery. If the telephone is to remain unused or out of its charger for several weeks, remove the battery and store it separately.

* battery charged after 3h or 5h depending on the model.

2 3. Switching on your telephone

Switch on (long press)

Wait a moment (about 3 seconds)

Your telephone is switched on

If the display does not come on or if the battery charge level icon flashes, recharge the battery.

If the radio coverage icon does not appear on the telephone display:

- Check that you are in an area of radio coverage (if not, move closer to a base station).
- Check that your telephone is correctly installed on the system (contact the PBX manager for this).

If the display indicates: ***"System I - Auto install ?"****, see paragraph* ***"Registering the telephone"*** *or contact your installation technician.*

Switching off your telephone:

Press the key (long press).

2 4. Accessing the MENU and navigating

The MENU can be accessed from the welcome screen by pressing the OK key.

The following screen is displayed:

Welcome screen

Confirm



Main menu

Accessing the functions:

Select a function in the MENU

Confirm

Within the function you can move horizontally along the different icons or vertically in the text menus

3. Using your telephone

3 1. Making a call

• Block mode dialling



Dial — Send the call

OR

• Digit-by-digit mode dialling

Off-hook — Dial

Erase using the C key

Your correspondent's phone is ringing — You are in conversation — Hang up

- *To make a call to the exterior, dial the "Direct outside line" code before your correspondent's number.*
- *To call the operator, dial the "Attendant call" code.*

Consult the corresponding codes under the heading **"Call"** *of the function*

OPTIONS:

Your correspondent doe not answer, you can confirm the option:

- **"Call back"** to request a call-back
- **"Text Mail"** to send a text message
- **"Voice Mail"** to leave a voice message
- **"Answer LS"** to send a message directly over your correspondent's loudspeaker
- **"DECT"** to call his DECT mobile terminal

3 2. Answering a call

You are receiving a call | Off-hook | You are in conversation | Hang up

The ringer does not ring if:

- *the vibrator is enabled and the ringer is disabled, the icon is displayed on the welcome screen,*
- *the ringer is disabled and the icon is displayed on the welcome screen.*

The light flashes (green) if the vibrator and ringer are disabled.

OPTIONS :

When your telephone rings, you can confirm the option:

- **"Silent"** to disable the ringer.
- **"Reject Call"** to forward the call to the overflow number without off-hooking.

3 3. Calling from your personal directory

• Direct access



Actuate the navigator downwards | Select the name of the person you wish to call | Send the call

• From the MENU

Select the **"Directories"** function | Confirm | Confirm access to the **"Personal Dir"**

3 4. *Calling your correspondent by name (phone book)*

• **Direct access**

Press the **"Phone Book"** key

Enter the name or initials (*) (first name and name) of your correspondent

Confirm



Select the desired type of search (by surname, initials, or surname and first name)

Confirm



Select the desired name

Send the call

• **From the MENU**



Select the **"Directories"** function

Confirm

Select the **"Phone Book"** option

Confirm

(*) To enter the name: the keys of the numerical keypad have letters that can be displayed by pressing the key the appropriate number of times in succession. A grid at the bottom of the display indicates the selected character.

Example: press "8" two times in succession to display the letter **"U".**

Wait for the cursor to move or actuate the navigator to the right to proceed to the next character.

In case of error, erase using the C key.

3 5. Calling back one of the last 6 numbers dialled (Redial)

To call back the last number dialled:

• press (long press),

• or else:



Select the **"Redial"** function

Confirm

Select a name or number

Send the call

3 6. Making a call-back request

When your correspondent's number does not reply or is busy:

Confirm the **"Call Back"** option



The request is accepted

Hang up

If your correspondent is busy, you will be called back automatically has soon as he hangs up.

If your correspondent has activated call forwarding on his telephone, the call-back request is not forwarded.

3 7. Calling a correspondent on his loudspeaker

You correspondent does not answer or is busy:

Select the **"Answer LS"** option

Confirm

Your are connected directly to your correspondent's loudspeaker.

Your correspondent must off-hook if he wants to answer you.

3 8. *Leaving a voice message*

Your correspondent does not answer or is busy:

Select the **"Voice Mail"** option

Confirm

3 9. *Leaving a text message*

Your correspondent does not answer or is busy:

Select the **"Text Mail"** option

Confirm

Select the type of message

Confirm

Select the message

Confirm to send the message

Return to idle

Types of messages :
- **Fixed messages:** predefined messages
- **Prg Messages:** predefined messages to be completed
- **New Message:** message to be composed as desired (32 characters maximum) (See § 7.4)

3 10. *Overriding a forwarded call*

The call is forwarded to another number

Select the **"Override"** option

Confirm

The call is redirected to the called terminal

3 11. *Using hands-free mode*

- **Headset mode:**

  If the "Headset" option is available (single-line terminal, system programming), as soon as you mmlug in the headset jack you can receive calls without touching your telephone set.

  An incoming call is signalled by a beep and your telephone off-hooks automatically. At the end of the communication your telephone set automatically returns to idle.

- **"Voice desktop" charger:**

  As soon as the telephone is placed in the "Voice desktop" charger, the hands-free function is available:

  - when an incoming call arrives, if you off-hook without removing the telephone from the charger, you can talk in hands-free mode.
  - during a conversation, as soon as you place the telephone in the charger you enter hands-free mode.

In hands-free mode the + and - keys on the charger are used to adjust the volume and the key on the telephone cuts off the microphone momentarily (the light on the charger flashes).

3 12. *Sending DTMF signals*

During a call, you sometimes have to send DTMF signals, for example, for a voice message service, an automatic switchboard or when remotely consulting an answering machine:

In conversation

Select the **"Send MF"** option or the **"DTMF"** icon

Confirm

All digits dialled are then sent in DTMF

To deactivate the function, confirm the **"Deact MF"** option.

3 13. *Camp-on when a correspondent is busy*

You call an internal correspondent whose terminal is busy (single-line terminal). To camp on:

Correspondent busy

Select the **"Wait"** option

Confirm

Your correspondent is informed that you are waiting. If he does not answer your call, his terminal will ring automatically when he hangs up.

3 14. *Intrusion into a conversation*

Your correspondent's terminal is busy (single-line terminal). If you are are authorized, you can intrude on the ongoing conversation. To do this:

Correspondent busy

Select the **"Intrusion"** option

Confirm

If one of the 3 correspondents hangs up, the other 2 remain in communication.

Protecting yourself against intrusion

You can protect yourself against intrusion by validating the **"Intrus protect"** option under the heading ⇒ ⇒ **"Services"** ⇒ **"Diverse services"** before establishing your communication. The protection is cancelled when you hang up.

3 15. *Calling a private external number*

You can make an external call independently of the access restrictions This call will be specifically identified by the call charging management application.

1. Enter the **"Private call"** code
2. Enter your personal identification code (PIN code)
3. Enter your personal code if applicable
4. Enter your correspondent's number

3 16. *Allocating your calls to customer account codes*

You can allocate the cost of your external communications to customer account numbers.

1. Validate the **"Account code"** function under the heading ⇒ ⇒ **"Services"** ⇒ **"Diverse services".**
2. Enter the customer's account number.
3. Enter the **"Direct outside line"** code followed by the number of your correspondent.

3 17. *Placing an external correspondent on hold (parking)*

You can place a correspondent on hold and pick up the call on any one of the company's terminals.

Call in progress — Select the **"Park"** option — Confirm — Dial the number of a terminal or hang up

If you hang up without dialling a terminal number, the call is "parked" on your terminal.

Picking up a "parked" call:

- From the terminal on which the call was parked: validate the **"Park/Retrieve"** function under the heading ⇒ ⇒ **"Services"** ⇒ **"Pick up services".**
- From any terminal: repeat the same operation then enter the number of the terinal on which the call was parked.

If the call is not picked up retrieved within a given lapse of time, it is forwarded to the operator.

3 18. *Reporting malicious calls*

You can report malicious calls:

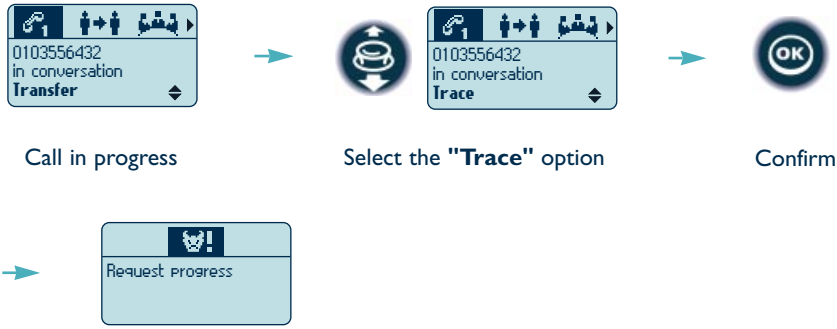

Call in progress — Select the **"Trace"** option — Confirm

- If the call is of internal origin, it is reported to the system by a specific message.
- If the call is of external origin, it can be reported to the public switchboard operator.

4. Handling several calls

Certain functions can be activated either by using the text menu options or by selecting an icon in the icon strip with the navigator.

4 1. Calling a second correspondent (enquiry call)

Call in progress



Dial the number

Send the call

• **Multi-line configuration**

The first correspondent is on hold

Cancel the enquiry call



The first correspondent calls back

Recover the first correspondent

• **Single-line configuration**

The first correspondent is on hold

To cancel the enquiry call, select the **"Enquiry Off"** option

Confirm



The first correspondent calls back

Recover the first correspondent

CAUTION: In a single-line configuration, if you hang up during an enquiry call you make a transfer.

You can also initiate an enquiry call by first confirming the option:
- ***"Enquiry Call "** when you are sending DTMF signals.*
- ***"Directories"** to use your private directory or call by name.*

2. *Answering a second call during a conversation*

During a call, a second correspondent tries to contact you:

• Multi-line configuration



A second incoming call is signalled by several "beeps"

OR

Off-hook



The first correspondent is placed on hold

If you do not take the second call immediately, it continues to be signalled camped until your correspondent hangs up.

• Single-line configuration

A second incoming call is signalled by several "beeps"



Select the **"Consult"** option

Confirm

In conversation with the second correspondent

Return to the first correspondent by confirming the **"Broker Call"** option

OR

4 3. Switching between calls (broker call)

You are in conversation with a correspondent, a second correspondent is on hold, to switch from one correspondent to the other:

- **Multi-line configuration**

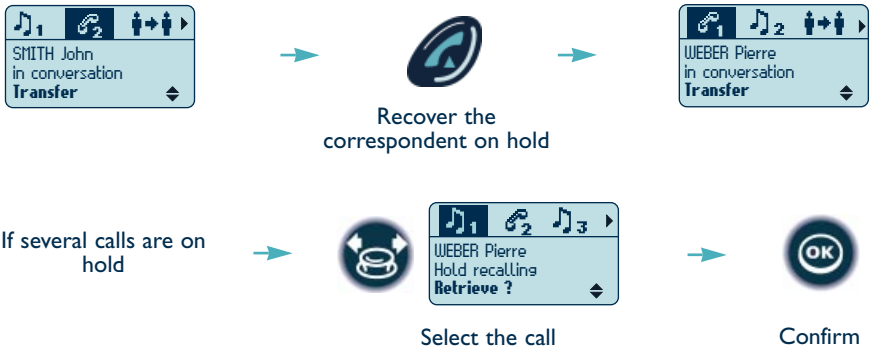

- **Single-line configuration**

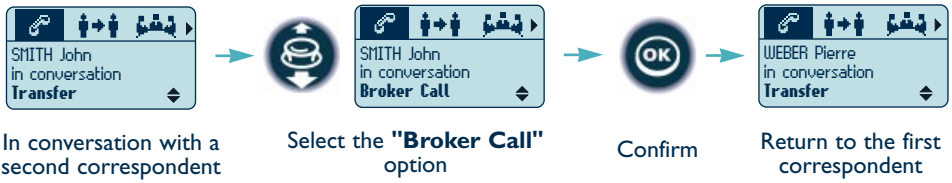

OR

4 4. *Transferring a call*

You are holding a conversation. Make an enquiry call to contact the transfer destination number, then:

• **Multi-line configuration**

The first correspondent is placed on hold

Confirm the option **"Transfer"**

Transfer accepted

Return to idle

• **Single-line configuration**

The first correspondent is placed on hold

Confirm the option **"Transfer"** or hang up

Transfer accepted

Return to idle

- *You can also initiate a transfer by confirming the* ***"Transfer"*** *option before calling a second correspondent.*
- *You can transfer your call immediately without waiting for your second correspondent to reply, even if he is busy.*

Transfer between two external correspondents is not usually authorized (depends on the country)

4 5. Three-way conference with 2 internal and/or external correspondents (3-way conference)

You are in conversation with one correspondent and a second is on hold:

Select the **"Conference"** icon or option

Confirm

Conference in progress

To cancel the conference, confirm the **"End Conference"** option. You recover the your first correspondent.

- *You can also initiate a conference by conforming the **"Conference"** option before calling a second correspondent.*
- *If you hang up during a conference, your two correspondents remain in communication (restriction possible for two external correspondents).*

4 6. Camp-on busy control

You can prohibit camping on of your correspondents when your terminal is busy. External calls will be forwarded to the operator.

• **During a call**

Select the **"Forbid Camp On"** option

Confirm

To cancel, select the **"Permit Camp On"** option

Confirm

• **Before making a call**

Confirm the function **"Camp On Control"** under the heading ⇒ ⇒ **"Services"** ⇒ **"DND/locking/VG".**

The function remains valid until the next change, even after hanging up.

4 7. Forwarding calls when you are busy

You can request the immediate forwarding of calls when your terminal is busy.

Select the **"Forwarding"** function

Confirm

Select the **"Forwarding List"** icon

Confirm the **"Fwd On Busy"** function

Confirm **"Dial a Number"** or use another option

Enter the forwarding destination number

Confirm

Forwarding is accepted

Return to idle

5. Customizing and adjusting your telephone

5 1. Choosing the language

You chan choose the language of the display and voice guides.



Select the **"Language"** function | Confirm | Select the language of your choice | Confirm | Return to idle

5 2. Programming your personal directory

- **Creating an entry in your personal directory**

Your personal directory can contain up to 12 numbers.

Select the **"Directories"** function | Confirm | Confirm access to the **"Personal Dir"**



Confirm | Select the **"Create"** option

Confirm | Enter the name (*) (14 characters max.) | Confirm

Enter the number (30 figures max.) | Confirm

(*) To enter the name: the keys of the numerical keypad have letters that can be displayed by pressing the key the appropriate number of times in succession. A grid at the bottom of the display indicates the character selected.
Example: press "8" two times in succession to display the letter **"U".**

Wait for the cursor to move or actuate the navigator to the right to proceed to the next character.
If you make a mistake, erase it using the C key.

Program your personal directory using the phone book.

After selecting a name in the phone book, confirm twice then confirm the ***"To Directory"*** *option.*

Your personal directory is automatically programmed with the name you have selected.

- **Modifying or erasing an entry in your directory**

Select the desired entry — Confirm — Select **"Modify"** — Confirm

Modify the name (*) (14 characters max.) — Confirm — Modify the number (*) (30 figures max.)

Confirm — Select **"Delete"**

Confirm — Confirm

(*) Use the navigator to select the letter or figure to modify.

Before entering the name and number, erase the old ones using the C key.

5 3. Programming your own password

Your telephone password is 0000 by default. You are asked for this password in order to access certain functions.

Select the **"Guide"** function

Confirm



Select **"Password"**

Confirm



Enter your password or the default password 0000

Confirm



Enter the new password 4 figures

Confirm



Confirm the new password

Confirm



Return to idle

5 4. Programming your associate number

The associate number can be an internal terminal number, the number of the voice message service or the pager number. It can be used as a call overflow number.

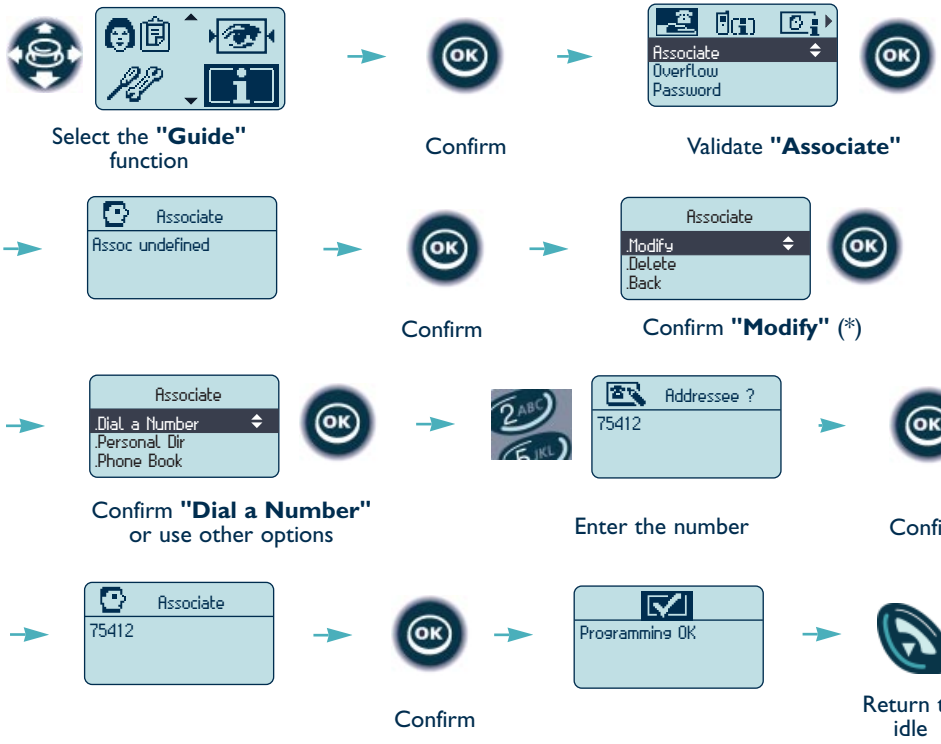

Select the **"Guide"** function

Confirm

Validate **"Associate"**

Confirm

Confirm **"Modify"** (*)

Confirm **"Dial a Number"** or use other options

Enter the number

Confirm

Confirm

Return to idle

(*) Confirm **"Delete"** to delete the associate number.

5 5. Programming your overflow number

If your terminal is unavailable, outside the coverage area or out of service, calls to it are automatically forwarded to this number if it has been programmed.

Select the **"Guide"** function

Confirm

Select **"Overflow"**

Confirm

Proceed in the same way as when programming the associate number.

• Choosing the melody and volume

Select the **"Ringer"** function

Confirm

Select the melody of your choice

Confirm

Select the **"Volume"** icon

Increase / reduce the volume

Confirm

Return to idle

• Rapid customizing of the ringer

Depending on your activity, the ringer parameters can be modified rapidly by a short press on the key and then pressing the OK key.

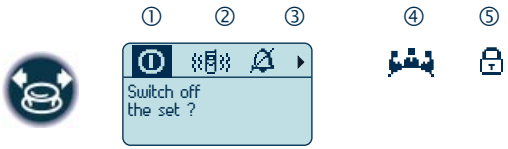

① Switch off the telephone
② Activate / disable the vibrator (Mobile 200)
③ Activate / disable the ringer
④ Activate / disable meeting mode (progressive ringing)
⑤ Activate the keyboard lock

Validate the chosen option with OK

5 7. Activating the vibrator or ringer (Mobile 200)

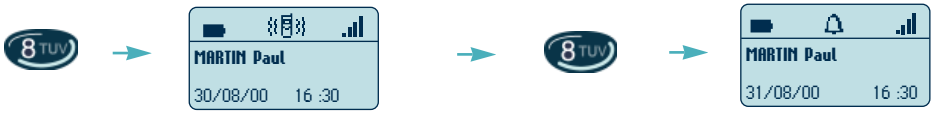

Long press

Vibrator activated and ringer disabled

Long press

Vibrator disabled and ringer activated

This key can be used to switch rapidly from the ringer to the vibrator and vice-versa.

5 8. Using the loudspeaker

You can activate or disable the terminal loudspeaker when dialing a number of during a conversation by pressing the key.

The icon indicates activation of the loudspeaker.

The audio level, like the earpiece volume, can be adjusted by using the + and - key located on the side. When making the adjustment, beeps indicate selection of the maximum or minimum level.

The loudspeaker can be particularly useful for listening to the voice guides, when listening to recorded messages for example.

5 9. *Adjusting your telephone functions*

Select the **"Adjustment"** function

Confirm

Select the function* you want to activate or disable

Activate / disable

Return to idle

*** You can activate or disable the following functions:**

- **Back-light (Mobile 200)** The telephone is back-lit when you press a key
- **Ringer** The telephone rings when there is an incoming call
- **Vibrator (Mobile 200)** The telephone vibrates when there is an incoming call
- **Keypad beep** A beep is emitted each time a key is pressed
- **Warning beep** A beep is emitted as soon as an error is detected
- **Coverage beep** A beep is emitted when the radio link is no longer detected
- **Screen Saver** Screen proposed after a period of inactivity

5 10. *Adjusting screen contrast*

Select the **"Adjustment"** function

Confirm

Select the **"Contrast"** icon

Increase or decrease the contrast

Return to idle

5 11. *Identifying the telephone you use*

The identifier or the telephone number are displayed permanently when the telephone is within the radio coverage zone and is not being used (when screen save is not displayed).

If the telephone number is not displayed:

- in standby mode: long press,
- or:

Select the **"Guide"** function — Confirm — Select the **"Who ?"** icon

5 12. *Using the list of functions*

The available functions can be implemented by entering a code (see table of codes) if they are not directly accessible through an icon.

The list of functions available under the **"Services"** heading can be used to access these functions without having to know the activation code.

Select the **"Guide"** function — Confirm — Select the **"Consultation"** icon then the **"Services"** option — Confirm

Select the desired group of functions — Confirm — Select the function to activate — Confirm

Defining function groups

Fwd services

Fwd Immediate	: immediate unconditional forwarding
Fwd On Busy	: immediate forwarding on busy
Fwd On No Rep	: delayed forwarding on no reply
Fwd Busy/NoRep	: forwarding on busy or no reply
Remote Forward	: immediate forwarding of one terminal from another terminal
Deact Forward	: deactivation of programmed forwarding
Deact FollowMe	: deactivation of forwarding from the forwarding destination terminal
Deact Rem Fwd	: deactivation of forwarding from another terminal

DND/locking/VG

Set lock/unlock	: locking/unlocking of the terminal
DND on/off	: activating/disabling the "do not disturb" function
VG on/off	: activating/disabling the playing of voice guides
Secret Ident.	: hiding your identity
Display Ident.	: hiding the identity of your correspondent
Camp On Control	: controlling camp-on busy

Pick up services

Group pick up	: picking up a group call
Ext pick up	: picking up a call on another terminal
Night pick up	: answering the general bell
Park/Retrieve	: parking/retrieving a call
Common Hold	: holding in a pick-up group

Assoc services

Overflow assoc	: validation of overflow to the associate number on no reply
Overfl. on busy	: validation of overflow to the associate number on busy
Overfl. on B/NR	: validation of overflow to the associate number on busy or no reply
Canc assoc ovflw	: cancellation of programmed overflow

Consult & CallBk

CalBk last call	: call-back to last caller remains unanswered
Charging info	: display of charging meters
Alarm Consult	: consultation of the alarms

Appoint reminder

Set appointment	: programming an appointment reminder
Cancel appointm	: cancelling an appointment reminder

Voice mail

Voice mail num.	: access to the voice mail
List.voice msg	: consultation of the voice messages
Notif.Voice msg	: notification of arrival of a voice message
Send voice msg	: leaving a voice message
Call recording	: recording the conversation

Diverse services

Intrus protect	: temporary protection against intrusion
Account code	: allocating a call to a customer's account
Substitution	: substitution of one terminal for another
Hunting grp in	: returning to the hunting group
Hunting grp out	: leaving the hunting group
Set out for mov	: putting the terminal out of service
Meet Me Conf.	: programmed conference
Z Behind UA	: analogue terminal behind a Reflexes terminal
Auto Conference	: supervised automatic conference
Announcement	: message broadcasting over the loudspeaker
Man. Cconference	: supervised manual conference

Paging Services

Paging	: replying to a paging call

Transparency

Decad	: transparency in decadic dialing
DTMF	: transparency in voice frequency dialing
Alpha	: Alphapage connection

The proposed list of functions depends on the configuration of your system and the authorizations given by the system administrator.

13. *Programming an appointment reminder*

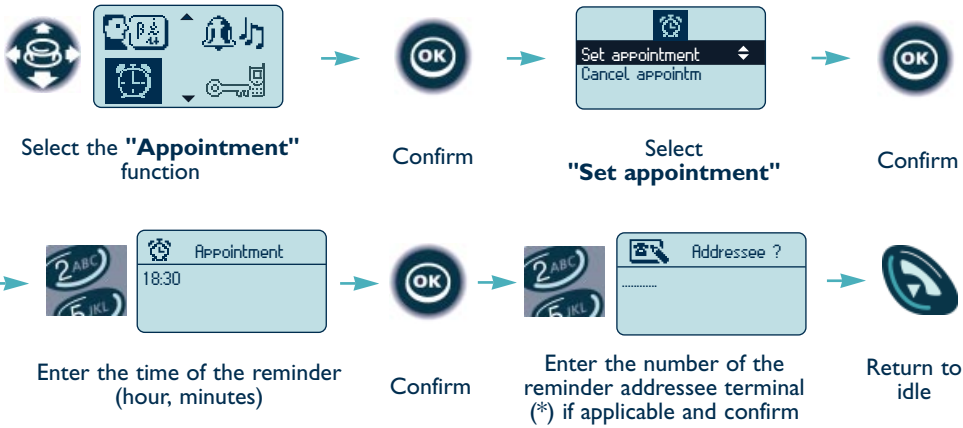

Select the **"Appointment"** function

Confirm

Select **"Set appointment"**

Confirm

Enter the time of the reminder (hour, minutes)

Confirm

Enter the number of the reminder addressee terminal (*) if applicable and confirm

Return to idle

(*) If you do not enter a number, the appointment reminder will be given on your terminal by default.

At the programmed time, your telephone rings:



Confirm the response

If you do not confirm the response to the first call, a second call will be made. If the second call remains unconfirmed, the reminder request will be cancelled. If your line is forwarded to another number, your call will not follow the forwarding.

To cancel your appointment reminder request:

Select the **"Cancel appointm"** and confirm.

5 14. *Hiding your identity*

If you hide your identity when you make a call, your name or number will not be displayed on your correspondent's terminal.

Before making a call, validate the **"Secret Ident."** function under the heading ⇒ ⇒ **"Services"** ⇒ **"DND/locking/VG".**

This function remains activated until it is cancelled using the same procedure.

5 15. *Do not disturb function*

You can render your terminal temporarily inaccessible to all calls other than operator calls.

Validate the function **"DND on/off"** under the heading ⇒ ⇒ **"Services"** ⇒ **"DND/Locking/VG".**

This function remains activated until it is cancelled using the same procedure.

The current status is shown on the standby screen.

5 16. *Finding out the cost of your external calls*

Validate the **"Charging info"** function under the heading ⇒ ⇒ **"Services"** ⇒ **"Consult & CallBk".**



Display of the cost or number of units of the last communication and the total since the counters were last reset

5 17. *Locking your telephone*

This function is used to prohibit all external communications (*) (except entry of the password) and any changes in the programming of your telephone:

Select the **"Lock"** function — Confirm — Confirm

Locking confirmed — Return to idle

To unlock:

Select the **"Lock"** function — Confirm — Confirm

Enter your password — Confirm — Unlocking confirmed — Return to idle

(*) If making an external call with block mode dialing, do not forget to enter the password after the "Direct outside line" code.

6. While you are away - When you return

6 1. Forwarding calls

There are several types of call forwarding. Whatever the type of forwarding you choose, you must access the **"Forwarding"** function.

To do this:

Select the **"Forwarding"** function

Confirm

Status of last forwarding action

6 2. Forwarding calls to another number (immediate forwarding)

This number can be that of an internal terminal (operator etc.), a home number, a mobile phone number, your voice message service or the pager.

- **To activate forwarding to the last number used**

Confirm access to immediate forwarding



Confirm the **"Activate Fwd"** option



The forwarding is accepted

Return to idle

You can continue to make calls while your telephone is forwarded. Only the forwarding addressee can call you.
General remark concerning forwarding: you can only activate a single forwarding option on your telephone.
Programming a new forwarding option will cancel the previous one.

- **To change the forwarding destination number**

Confirm access to immediate forwarding

Select the **"Modify Fwd"** option

Confirm



Confirm **"Dial a Number"** or use another option

Enter the forwarding destination number

Confirm

The forwarding is accepted

Return to idle

6 3. Other types of call forwarding

Other types of forwarding exist:

Fwd On No Rep: forward when you are absent (delayed forwarding on no reply).

Fwd On Busy: forwarding when you are already in conversation (immediate forwarding on busy).

Fwd Busy/NoRep: forwarding when you are absent or in conversation (forwarding on busy or no reply).

Remote Forward: forwarding one terminal from another terminal (immediate remote forward).

Example: Forwarding calls when you are absent (delayed forwarding on no reply)

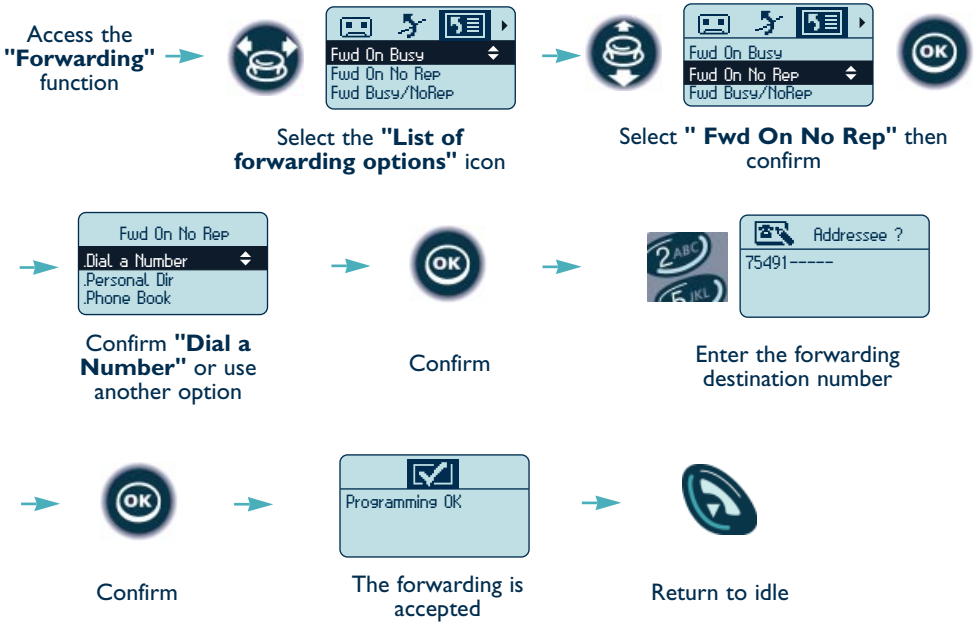

4. *Remote forwarding of calls (immediate forwarding)*

- **Forwarding your calls from another terminal (follow me)(*)**

You are working temporarily in another office and you want your calls to be forwarded to that office. On the terminal to which you want your calls to be forwarded:

Access the **"Forwarding"** function →



Select the **"List of forwarding options"** icon →



Select **"Remote Forward"**

→

Confirm

→ 

Confirm **"Dial a Number"** or use another option →

Enter the number of the terminal to forward

→

Confirm

→ 

The forwarding is accepted →

Return to idle

- **Forwarding the calls from any terminal in the company (*)**

To forward the calls from any terminal in the company to another terminal:

Confirm the **"Remote Forward"** function



Confirm **"Dial a Number"** or use another option

Confirm

Enter the forwarding destination number

Confirm



Confirm **"Dial a Number"** or use another option



Enter the number of the terminal to forward

Confirm



The forwarding is accepted

Return to idle

(*) These two functions are mutually incompatible and their availability depends on the configuration of your system.

6 5. *Forwarding calls to your voice mail service (immediate forwarding)*

Select the **"Forwarding"** function

Confirm

Select the **"Voice mail"** icon

Confirm

The forwarding is accepted

Return to idle

You can also make another type of forwarding to your voice mail by selecting the **"List of forwarding options"** icon and entering the number of the voice mail as the destination of the programmed forwarding.

6. Cancelling all forwarding functions

- **On your terminal**

Select the **"Forwarding"** function

Confirm

Select the **"Forwarding cancellation"** icon

Confirm



Confirm the **"Deact Forward"** option

Cancellation of forwarding is accepted

Return to idle

- **From the forwarding destination terminal**

Confirm the **"Deact FollowMe"** option

OR

- **From any terminal in the company**

Confirm the **"Deact Rem Fwd"** option



Confirm **"Dial a Number"** or use another option

Enter the number of the terminal on which forwarding must be cancelled

Confirm

6 7. Forwarding calls to an associate number (overflow)

This can be an internal number, a voice message service number or a paging number.

If you have defined an associate number beforehand (see § **"Programming your associate number"**), you can forward your calls to this number by confirming the corresponding function under the heading ⇒ ⇒ **"Services"** ⇒ **"Assoc services".**

- **Overflow assoc:** delayed forwarding (overflow) when you do not reply,
- **Overfl. on busy:** immediate forwarding (overflow) when your line is busy,,
- **Overfl. on B/NR:** forwarding (overflow), which is delayed if you do not reply or immediate if your line is busy.

To cancel forwarding confirm the **"Canc assoc ovflw".**

When forwarding is programmed it takes priority over overflow to the associate number.

6 8. Consulting the messages left while you were away

You can consult the messages left while you were away: voice messages, call-back requests, text messages, list of unanswered internal and external calls.

When you have received a new message:

- the indicator light is on (green on Mobile 100, red flashing slowly on Mobile 200),
- the icon is displayed on the saver screen if only unanswered messages are present,
- the icon is displayed on the saver screen in the other cases.

- **Voice messages**

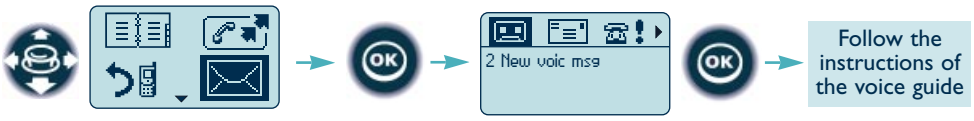

Select the **"Messages"** function — Confirm — Validate to access the voice messages

- **Text messages**

Select the **"Messages"** function

Confirm

Select the **"Text messages"** icon

Confirm



Select the message you want to read

Confirm

Navigate in the pages of the message

Confirm

Select an option

Confirm

OPTIONS:

- **Delete** : erase the message. The message remains stored until it is erased.
- **Call Back** : call back directly the person who left the message.
  If your correspondent replies when you call back, the message is erased automatically.
- **Answer By Text** : send back a text message to the person who left the message.
- **Next** : proceed to the next message.
- **Back** : return to the previous screen.

- **Call-back requests**

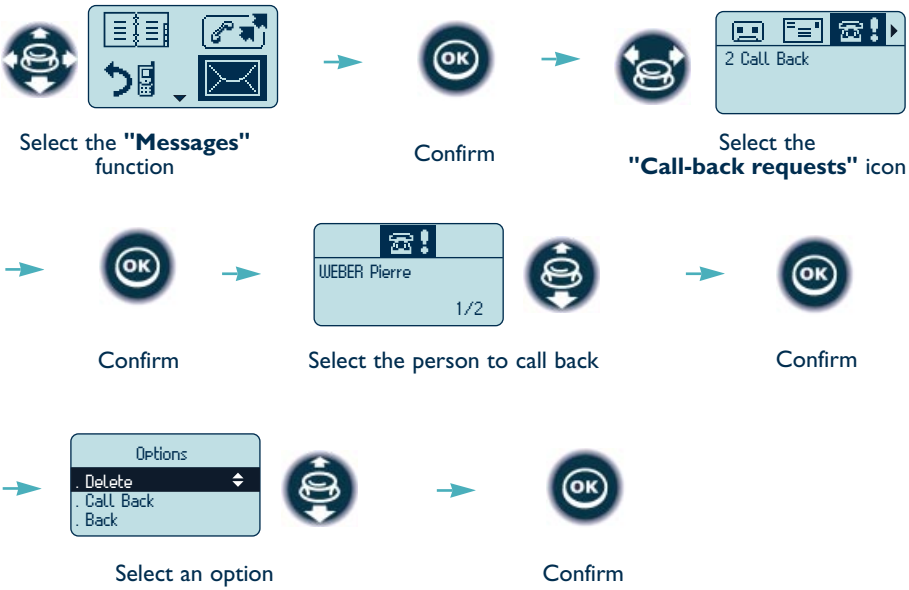

Select the **"Messages"** function

Confirm

Select the **"Call-back requests"** icon

Confirm

Select the person to call back

Confirm

Select an option

Confirm

If you use the **"Call Back"** option, the request is erased even if your correspondent does not answer. Otherwise the request remains stored as long as the **"Delete"** option has not been confirmed.

The ☎! icon is only present if there is at least one call-back request (8 maximum).

- **Lists of unanswered internal or external calls**

The procedure for consulting the lists of unanswered internal or external calls is identical to that for the call-back requests.

To access the lists, select the int icon (internal calls) or the ext icon (external calls).

If you use the **"Call Back"** option, the message is erased automatically if your correspondent replies. Otherwise it remains stored as long as the **"Delete"** option has not been validated.

The int and ext icons are only present if there is at least one message (16 maximum).

6 9. *Calling back the last internal caller*

You can call back the last unanswered internal caller without knowing their telephone number.

Confirm the function **"CalBk last call"** under the heading ⇒ ⇒ **"Services"** ⇒ **"Consult & CallBk".**

You are automatically routed to the person who made the last call.

If you reply to a call before confirming this function, the information is lost.

7. Group operation

7 1. Answering the general bell

When the operator is absent, incoming external calls are forwarded to a general bell. You can answer these calls:

Confirm the function **"Night pick up"** under the heading ⇒ ⇒ **"Services"** ⇒ **"Pick up services".**

7 2. Call pick-up

- **Picking up a call on another terminal**

If you are duly authorized, you can pick up a call made to another terminal.

Confirm the **"Ext pick up"** function under the heading ⇒ ⇒ **"Services"** ⇒ **"Pick up services"**, then dial the number of the terminal that is ringing.

The system can be configured to prevent call pick-up on certain telephones.

- **Group call pick-up**

You belong to a call pick-up group, from your terminal you can pick up an incoming call to any of the terminals in the group.

Confirm the **"Group pick up"** function under the heading ⇒ ⇒ **"Services"** ⇒ **"Pick up services".**

7 3. Hunting groups

- **Hunting group call:**

Some terminals can be associated to form a group. You can contact any one of them by dialling the group number.

Belonging to a group does not affect the management of direct calls. A specific telephone within a group can always be called by using its own number.

- **Temporary exit from your hunting group:**

Confirm the function **"Hunting grp out"** under the heading ⇒ ⇒ **"Services"** ⇒ **"Diverse services".**

- **Return into your group:**

Confirm the function **"Hunting group in"** under the heading ⇒ ⇒ **"Services"** ⇒ **"Diverse services".**

7 4. *Sending a text message to an internal correspondent*

You can send a text message directly to an internal correspondent without calling him.

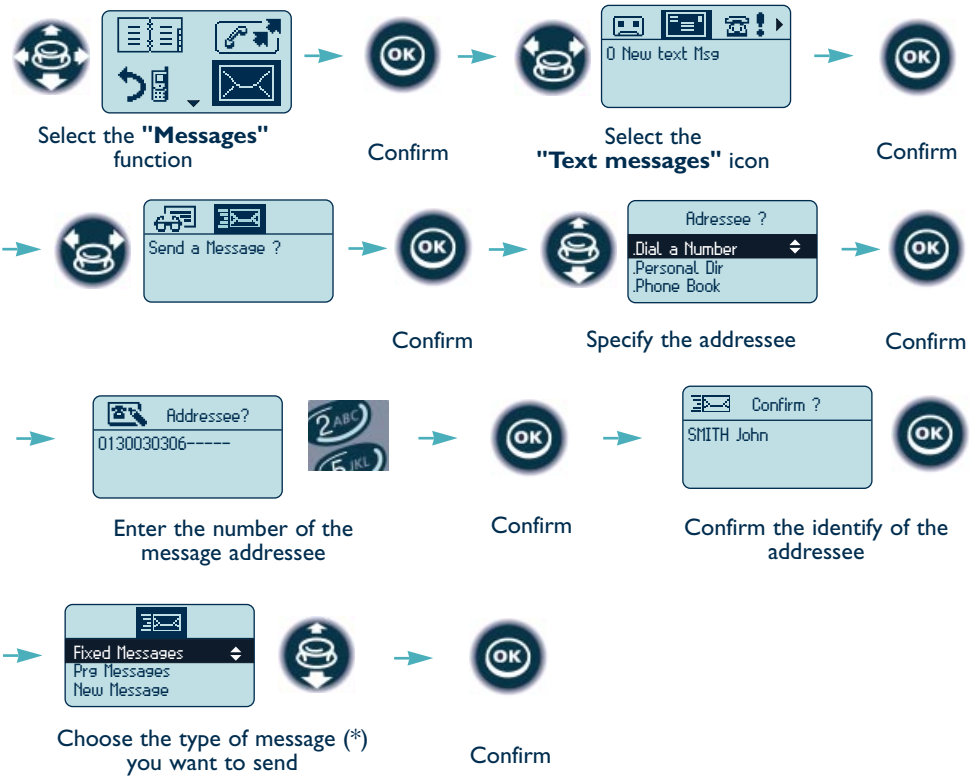

Select the **"Messages"** function

Confirm

Select the **"Text messages"** icon

Confirm

Confirm

Specify the addressee

Confirm

Enter the number of the message addressee

Confirm

Confirm the identify of the addressee

Choose the type of message (*) you want to send

Confirm

(*) There are three types of messages:
- **Fixed Messages:** predefined messages
- **Prg Messages:** predefined messages to be completed
- **New Message:** messages to be composed freely (32 characters maximum)

- **If the selected message has to be created:**

Compose the text of the message

Confirm

Return to idle

When editing a message, the characters entered can be erased with C

- **If the selected message has to be completed:**

Select a message

Confirm

Complete the message

Confirm

Return to idle

- **If the selected message is predefined:**

Select a message

Confirm

Return to idle

7 5. Supervising a terminal

The supervision function enables one to find out the status of a terminal and be informed of the calls it receives (supervision with ringer).

This function is defined by your system administrator.

- **Consulting the status of a terminal**

Select the **"Supervis List"** function

Confirm

: terminal free
■ : terminal busy

To call the selected terminal directly

- **Supervising the calls**

Your terminal rings to indicate that there is an incoming call to supervised terminal no. 7416

Confirm the option **"Take the Call"** to pick up the call

8. MANAGER/SECRETARY filtering set

The manager/secretary filtering set is a special configuration comprising at least two multiline terminals offering specific operating options. The manager/secretary configuration can comprise several manager terminals and several secretary terminals.

8 1. Manager terminal

Calling a secretary directly

Select the **"Manager/secretary"** function

Confirm

Select the secretary (*)

Send the call

(*) Display of the status of the secretary's terminal.

The following supervision icons exist:

No icon : secretary available

☐ : secretary absent

■ : secretary in conversation

Activating call filtering

The filtering function allows calls to the manager's terminal to be forwarded to the secretary's terminal.

The filtering is associated with a filtering table defined by the system administrator.
This table can contain either priority numbers or numbers to filter.

- If you have a table of numbers to filter, only the calls from correspondents identified in that table will be forwarded to the secretary.
- If you have a table of priority numbers, only the correspondents identified in that table can call you directly.

You cannot activate simultaneously a table of priority numbers and a table of numbers to filter. Activation of the table of priority numbers cancels filtering by the table of numbers to filter.

Select the **"Manager/secretary"** function

Confirm

Select the secretary to whom the filtered calls are to be sent



Confirm

Select the **"Filtering"** option

Confirm

- **Table of numbers to filter**

To activate filtering:

Select the list of filtered calls

Confirm

Filtering is activated

Return to idle

Filtered calls forwarded to Ext. 7402

Or, to deactivate filtering (activated beforehand):



- **Table of priority numbers**

To activate filtering:

Select the list of priority calls — Confirm — Filtering is activated

Return to idle — Filtered calls forwarded to Ext. 7402

Or, to deactivate filtering (activated beforehand):

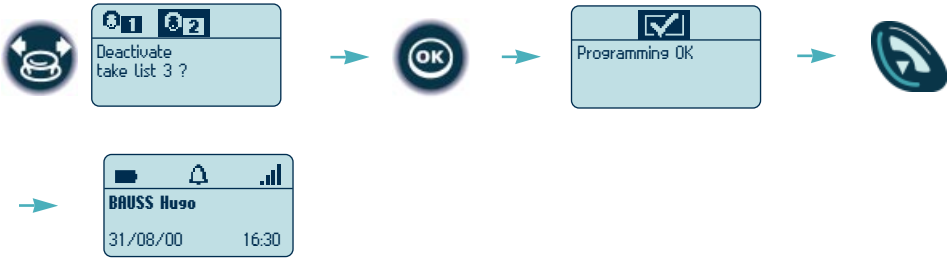

Picking up the filtered calls

When a filtered call is forwarded to your secretary, your terminal emits a specific ringing tone.

To pick up the call:



Call filtered to secretary's terminal Ext. 7402 — Off-hook — You are in conversation — Return to idle

Listening "discreetly" to a filtered conversation



Call filtered to the secretary's terminal Ext. 7402

The secretary off-hooks

Confirm the **"Listen"** option

Confirm the **"Pick Up"** option to take the call

OR

Return to idle

Calling a manager directly

Select the **"Manager/secretary"** function

Confirm

Select the manager's terminal (*)

Send the call

(*) Display of the status of the manager's terminal.

: manager available

■ : manager in conversation

Signalling your absence on the manager's terminal

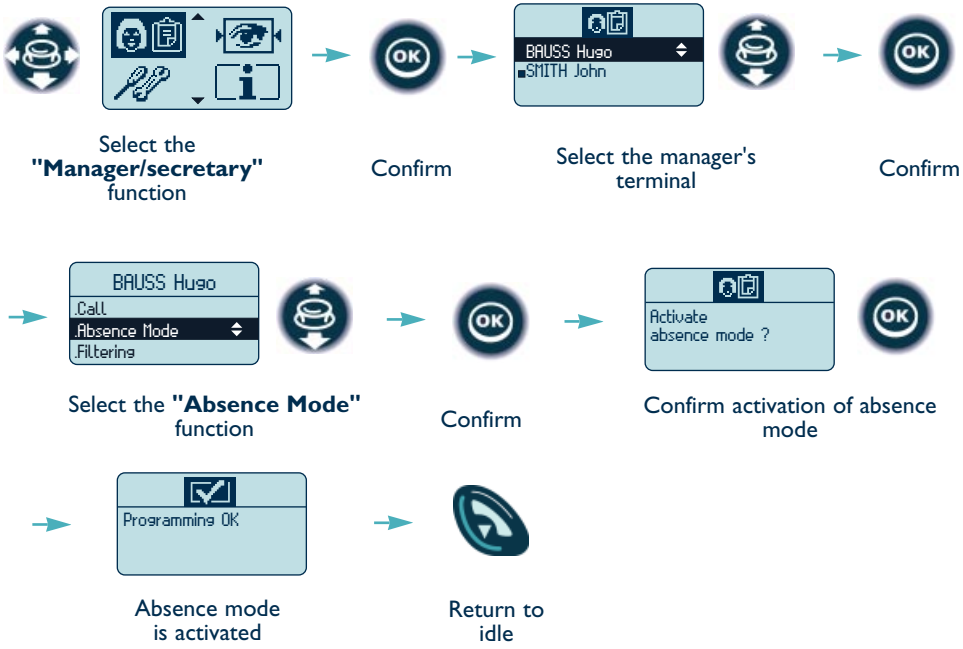

Select the **"Manager/secretary"** function

Confirm

Select the manager's terminal

Confirm

Select the **"Absence Mode"** function

Confirm

Confirm activation of absence mode

Absence mode is activated

Return to idle

Proceed in the same manner to deactivate absence mode.

When **"Secretary absent"** mode is confirmed, all call filtering via the secretary is cancelled.

Managing the filtered calls



Reception of a filtered call coming from manager's terminal Ext. 7400

Take the call

Call in progress

Select the **"Boss List"** option

Confirm



Select the filtered manager (Ext. 7400)

Initiate the call

The manager answers

- either transfer the call
- or recover the first correspondent

Managing call filtering in place of the manager

You can activate or deactive call filtering on the manager's terminal in his place, whether the filtered calls are forwarded to you or not.

Select the **"Manager/secretary"** function

Confirm

Select the manager

Confirm



Select the **"Filtering"** option

Confirm

• Table of numbers to filter

To activate filtering:

Select the list of filtered numbers — Confirm — Return to idle

Or, to deactivate filtering:

Select the list of filtered numbers — Confirm — Return to idle

• Table of priority numbers

To activate filtering:

Select the list of priority numbers — Confirm — Return to idle

Or deactivate filtering:

Select the list of priority numbers — Confirm — Return to idle

9. Registering the telephone

9 1. Registering the telephone on a system for the first time

For the mobile telephone to function, it must be registered on at least one Alcatel or GAP system (registration operation).
If when first switched on the display indicates: **"System 1 - Auto install ?"**
your telephone has not been registered on any system; consult your installation technician or proceed as follows:

1. Prepare your system for registration (see system installation guide).
2. When the system is ready, the station always displays the starting screen:

Confirm to install the telephone

3. You have two subscription possibilities:

a - If the system does not use an AC code

Launch subscription

b - If the system uses an AC (authentication code)



Select **"AC"** | Confirm | Enter the code | Confirm

Launch subscription

The registration operation can take up to 1 minute.

- If the registration operation runs correctly (Subscription accepted), the telephone is ready for use, and the radio coverage icon appears .
- If the registration operation has not been successful, the station proposes launching the subscription again.



Utilization of the telephone in GAP mode can lead to functional limitations for which no claims will be considered under the terms of the warranty.

9 2. Registering the telephone on other systems

The telephone can be registered on several systems (maximum of 5).

Note: entry 1 is usually reserved for use with your main ALCATEL system. You can select the other entries to register your telephone under another system (ALCATEL or other).

Proceed as follows to register your telephone on a new system when it is already registered on one or more systems:

1. Prepare your system for registration (see the system installation manual or consult your installation manager).
2. When the system is ready:

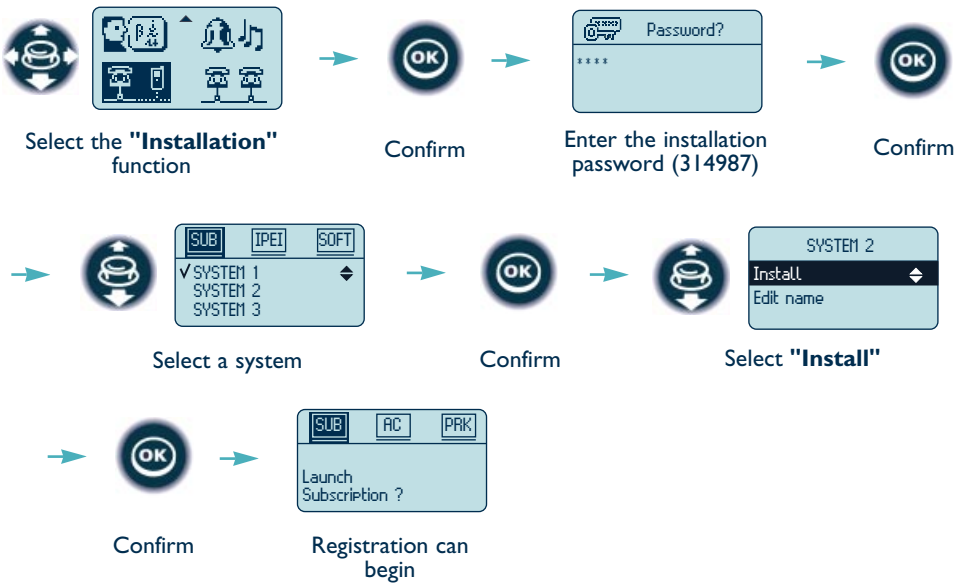

3. You have two subscription possibilities:

a - If the system does not use an AC code

Launch subscription

b - If the system uses an AC (authentication code)



Select **"AC"** Confirm Enter the code Confirm

Launch subscription

The registration operation can take up to 1 minute.

- If the registration operation runs correctly (Subscription accepted), the telephone is ready for use, and the radio coverage icon appears: .
- If the registration operation has not been successful, the station proposes launching the subscription again.



- Depending on the type of system in question, the telephone registration operation can require one or more additional operations on the system.

Selecting your telephone system

Your telephone can be programmed to function on 5 different DECT systems (ALCATEL or GAP).



Select the **"System"** function

Confirm



Select the desired input (the chosen option is indicated by the radio button with a central dot)

Confirm

Return to idle

The selection is retained even after switching the telephone on/off. The selection of a specific system (SYSTEM…) forces operation on a specific system. This selection must be changed if one wishes to change system. Selecting ***"Lock to any"*** *enables the telephone to connect automatically when it enters a system coverage zone. If the systems programmed in the telephone have common coverage zones, the telephone selects the first system found.*

10. Accessories

10 1. Chargers

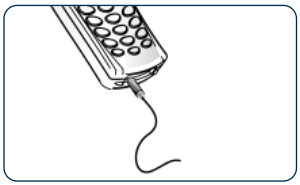

The "Corded" charger features:

1. a cable for connection to mains power via an AC/DC adapter.

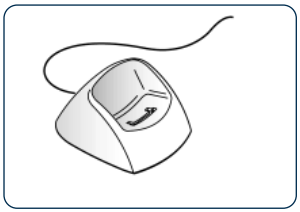

The "Basic Desktop" charger features:

1. a holder for the telephone,
2. a cable for connection to mains power via an AC/DC adapter.

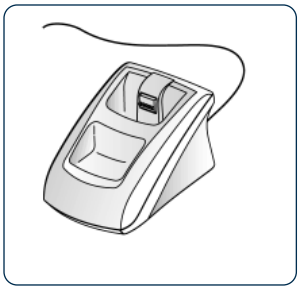

The "Dual Desktop" charger features:

1. a support with:
   - a recess for the telephone,
   - a recess for an extra battery,
   - a light indicating the charge level of the extra battery,
2. a cable for connection to mains power via an AC/DC adapter.

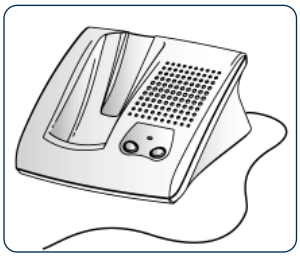

The "Voice Desktop" charger features:

1. a support with:
   - a recess for the telephone,
   - a loudspeaker and microphone for use in "hands free" mode,
   - two + /- volume adjustment buttons,
2. a cable for connection to mains power via an AC/DC adapter.

Press the phone key to enable or disable the microphone mute (toggle).

10 2. Characteristics of the mains power adapter

- Input: 230 V - 50 Hz
- Output: 12 V DC - 500 mA

The mains power socket used must be close to the charger/holder and easily accessible, so that it can be used as an "on/off" facility.

10 3. Battery

The **Mobile 200** is supplied with a Li-Ion battery, with a capacity of 600 mAh - 3.6 V.

The **Mobile 100** is supplied with a NiMh battery, with a capacity of 550 mAh - 3.6 V.

Autonomy of your telephone	Li-Ion battery	NiMh battery
On standby in the radio coverage zone	135 hours	120 hours
In continuous conversation	15 hours	13 hours

Initial charge:

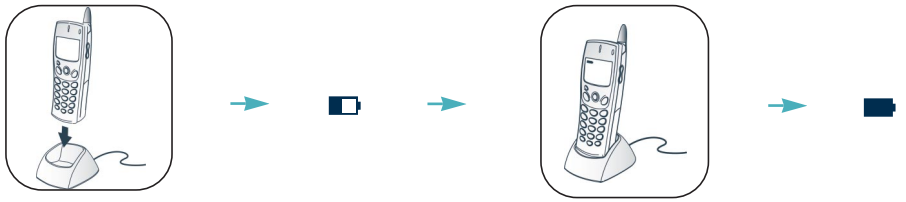

Place the telephone in the charging holder

Battery icon flashing

In charging phase (5 hours minimum)

The battery is charged

Maximum battery performance is only reached after around 10 charge/discharge cycles.

These batteries contain polluting substances: do not dispose of them in a dustbin - take them to a specialized collection point.

Battery charging time:

Mobile 100: ~ 5 h 00
Mobile 200: ~ 3 h 00
Additional battery: ~ 2 h 30

10 4. *Charging the extra battery (on the "Dual" support)*

The charger is powered on (AC/DC adapter connected to mains supply).

Place the extra battery in the appropriate recess of the charging holder. The charging time is about 2 hours 30 minutes (Li-Ion or NiMh battery).

The two-coloured light of the "Dual" charger gives the following indications:

- **Out:** extra battery not installed.
- **Red:** extra battery being charged.
- **Green:** extra battery fully charged.

10 5. *Headphone / external microphone*

The side of the telephone features a headphone / external microphone socket.
Contact your retailer to find out the characteristics of the various headphone models.

10 6. *Cleaning your telephone*

Your telephone does not require any particular servicing. However, it may be cleaned using a soft, damp cloth.

Do not use soap or detergent that would risk altering the colours or damaging the surface of the telephone.

10 7. *Transporting and protecting your telephone*

To avoid losing your telephone, get into the habit of clipping it onto your belt. Your

Various models of carrying case are available. Ask your installation technician for information. It is vital to use the special protective carrying case if your telephone is to be used in an industrial environment (presence of dust, filings, vapours of diverse origins and risk of being dropped). If the telephone is used with a carrying case, the belt clip must be removed.

11. MENU tree-structure

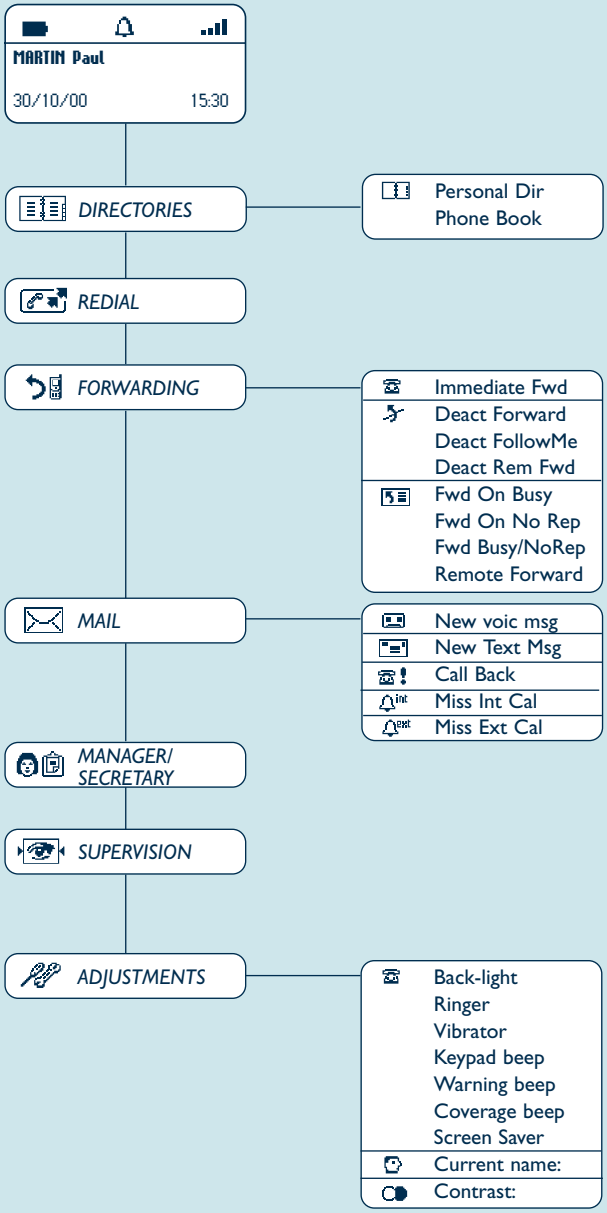

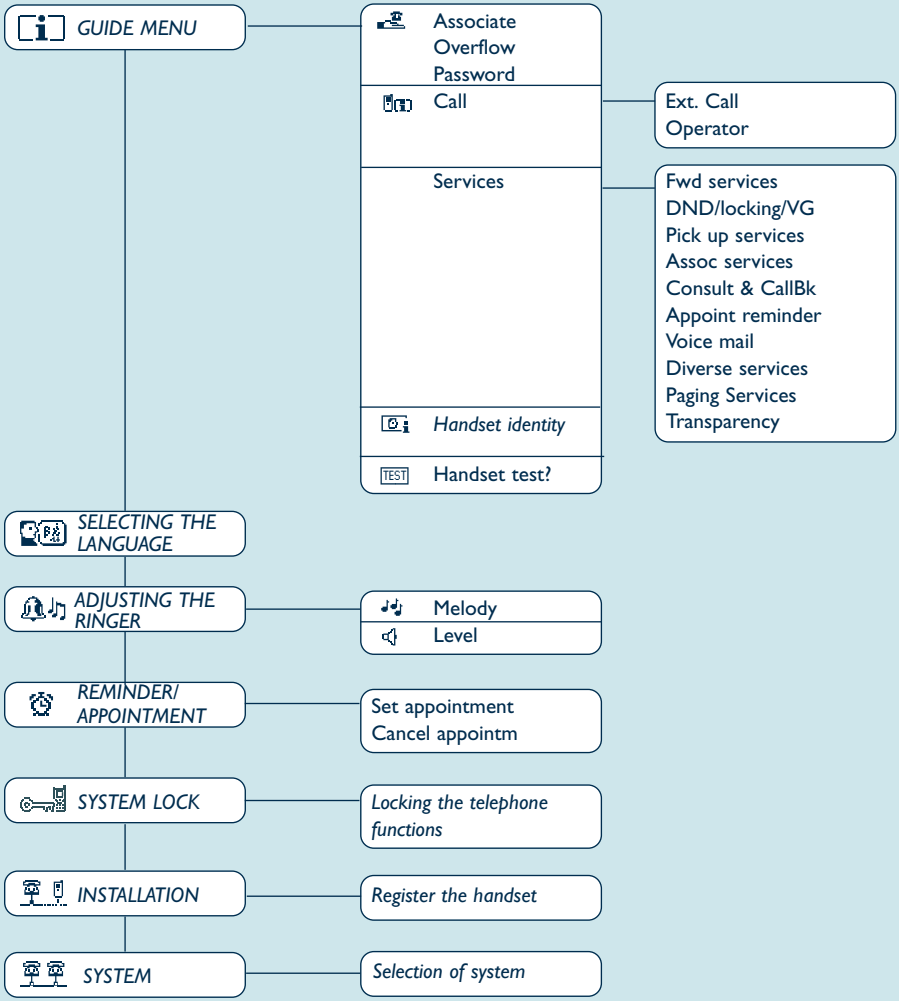
GUIDE MENU
Associate
Overflow
Password
Call
Ext. Call
Operator
Services
Fwd services
DND/locking/VG
Pick up services
Assoc services
Consult & CallBk
Appoint reminder
Voice mail
Diverse services
Paging Services
Transparency
Handset identity
TEST
Handset test?
SELECTING THE LANGUAGE
ADJUSTING THE RINGER
Melody
Level
REMINDER/ APPOINTMENT
Set appointment
Cancel appointm
SYSTEM LOCK
Locking the telephone functions
INSTALLATION
Register the handset
SYSTEM
Selection of system

12. Glossary

Answering a night call:
This functions enables you to answer a call signalled by the general bell.

Broker call:
Function enabling the user to switch back and forth between several simultaneous calls.

Call transfer:
Function enabling a call to be transferred to another telephone within the system.

Conference:
The conference function allows the user, in contact with two correspondents, to set up a three-way conference.

DECT:
European cordless telephone standard: Digital Enhanced Cordless Telecommunication.
DECT telephone: cordless telephone complying with the DECT standard.

Enquiry call:
This function allows a user who is communicating with one correspondent to contact a second correspondent without losing the first one.

Filtering:
This function, offered to "boss/secretary" tandems, enables calls intended for the boss's terminal to be directed to the terminal of one or more secretaries.

General bell:
If the operator is absent, the internal and external calls intended for the operator are linked to an external signalling system that enables any authorized terminal to answer these calls.

Hold:
This function enables a correspondent to be placed on hold while you carry out another operation before picking up the correspondent again from the same terminal.

Hunting group:
Several telephones grouped under one directory number. A call to this number is directed to one of the free telephones within the group.

Interphone:
This function enables you to receive internal calls in interphone mode by connecting them automatically to the loudspeaker.

Intrusion:
This function allows you to interrupt a call between two correspondents (of whom at least one is internal).

Manager/secretary:
Series of special services (filtering, forwarding) between a manager's terminal and a secretary's terminal.

Multi-line terminal:
Terminal that has at least two lines.

Numéris:
French digital public network, also called ISDN (Integrated Services Digital Network).

Parking:
This function places an outside call on hold, for subsequent recovery on another "authorised" extension within the system.

Password:
This password controls access to the programming and terminal locking functions by the user (default password: 0000).

Personal directory:
This directory contains the personal numbers of the user of a terminal.

Pick-up group:
This function enables you to answer a call ringing on another terminal. Calls can only be picked up within the pick-up group.

Sending DTMF signals:
During a conversation, DTMF codes are sometimes required. These codes are used when a user wants to consult a voice server, access a PABX or remotely consult an answering machine.

Single-line terminal:
Terminal that has only one line.

Sub-address:
To contact your correspondent's fax, PC or telephone by Numéris (ISDN), it may necessary to add a four-figure sub-address to the number.

13. Index

A

Accessing the MENU and navigating . . . . . p. 14
Activate call filtering . . . . . p. 59
Activating headset mode . . . . . p. 72
Activating the vibrator or ringer (Mobile 200) . . . . . p. 37
Adjusting screen contrast . . . . . p. 38
Adjusting the ringer volume . . . . . p. 36
Adjusting your telephone functions . . . . . p. 38
Allocating your calls directly to customer accounts . . . . . p. 23
Answering a call . . . . . p. 16
Answering a second call during a conversation . . . . . p. 26
Answering the general bell . . . . . p. 55

B

Battery . . . . . p. 71
Broker call . . . . . p. 27

C

Call forwarding . . . . . p. 45
Call pick-up . . . . . p. 55
Call-back request . . . . . p. 18
Calling a corresondent on his loudspeaker . . . . . p. 18
Calling a manager directly . . . . . p. 62
Calling a private external number . . . . . p. 22
Calling a second correspondent (enquiry call) . . . . . p. 25
Calling a secretary directly . . . . . p. 59
Calling back one of the last 6 numbers dialled (Redial) . . . . . p. 18
Calling back the last internal caller . . . . . p. 54
Calling from your personal directory . . . . . p. 16
Calling in hands-free mode . . . . . p. 20
Calling your correspondent by name (company directory) . . . . . p. 17
Camp-on busy terminal . . . . . p. 21
Cancelling all diversions . . . . . p. 50
Characteristics of the mains power adapter . . . . . p. 71
Chargers . . . . . p. 70
Charging the additional battery . . . . . p. 72
Charging your telephone battery . . . . . p. 13
Choosing the melody and volume . . . . . p. 36
Cleaning your telephone . . . . . p. 72
Consulting the messages left while you were away . . . . . p. 51
Controlling hold on busy . . . . . p. 30

Customizing the ringer . . . . . p. 36

D
Diverting calls to another number (immediate forward) . . . . . p. 45
Do not disturb . . . . . p. 43

E
Enquiry call . . . . . p. 25

F
Finding out the cost of your external communications . . . . . p. 43
Forwarding call to the associate number (overflow) . . . . . p. 51
Forwarding calls to your voice message service (immediate forward) . . . . . p. 49
Forwarding calls when you are busy . . . . . p. 31

G
Headphone / external microphone . . . . . p. 72
Hiding your identity . . . . . p. 43
Hunting groups . . . . . p. 55

I
Identifying the telephone you use . . . . . p. 39
Installing the battery in the telephone . . . . . p. 12
Intrusion into a conversation . . . . . p. 22

L
Leaving a text message . . . . . p. 19
Leaving a voice message . . . . . p. 19
Listening secretly to a filtered conversation . . . . . p. 62
Locking your telephone . . . . . p. 27

M
Making a call . . . . . p. 15
Managing call filtering . . . . . p. 64
MENU tree-structure . . . . . p. 73

O
Other types of forwarding . . . . . p. 47
Overriding a forwarded call . . . . . p. 20

P
Parking . . . . . p. 23
Picking up filtered calls (manager's terminal) . . . . . p. 61
Placing an external correspondent on hold (parking) . . . . . p. 23
Programming an appointment reminder . . . . . p. 42

Programming your associate number . . . . . p. 35
Programming your overflow number . . . . . p. 35
Programming your own password . . . . . p. 34
Programming your personal directory . . . . . p. 32

R

Rapid personalization of your telephone . . . . . p. 32
Registering the telephone . . . . . p. 66
Registering the telephone on a system for the first time . . . . . p. 66
Registering the telephone on other systems . . . . . p. 67
Remote forwarding of your calls (immediate forward) . . . . . p. 48
Reporting malicious calls . . . . . p. 24

S

Selecting the language . . . . . p. 32
Sending a text message to an internal correspondent . . . . . p. 56
Sending DTMF signals . . . . . p. 21
Signalling your absence to the manager terminal . . . . . p. 63
Supervising a terminal . . . . . p. 58
Switching between calls (broker call) . . . . . p. 27
Switching off your telephone . . . . . p. 13
Switching on your telephone . . . . . p. 13

T

Three-way conference with internal and/or external correspondents (conference) p. 29
Transferring a call . . . . . p. 28
Transporting and protecting your telephone . . . . . p. 72

U

Using hands-free mode . . . . . p. 20
Using the list of functions . . . . . p. 39
Using the loudspeaker . . . . . p. 37
Using your telephone . . . . . p. 11

Warranty

Independently of the legal warranty that covers this appliance, it is guaranteed for 1 year, parts and labour, counting from the date indicated on your invoice.

Nevertheless, if the legal warranty in effect in your country exceeds 1 year, then the legal warranty is the sole warranty applicable.

The invoice will be demanded if making a claim under the warranty. The warranty does not however apply in the following cases: in the event of use that does not comply with the instructions given in this user's manual, faults or damage caused by natural wear, damage resulting from a cause external to the appliance (e.g. impact, fall, exposure to dampness, etc.), noncompliant installation or modifications or repairs carried out by people who are not approved by the manufacturer or retailer.

The CE marking indicates that this product complies with the following EC directives:

CE

- 89/336/CEE (electromagnetic compatibility)
- 73/23/CEE (low voltage)
- 1999/5/CE (R&TTE)

Pursuant to directive 1999/5/CE (R&TTE) published in the Official Journal of the European Community of April 7, 1999, these items of equipment use the DECT harmonized frequency spectrum and can be used in all the countries of the European Community, in Switzerland and Norway.

No guarantee is given concerning possible interference affecting DECT equipment, due to other authorised utilisation of the radio frequencies concerned.

Declaration of conformity

We,
ALCATEL BUSINESS SYSTEMS
32, avenue Kléber
92707 Colombes Cedex - France
declare that the following products are deemed to comply with the requirements of Directive 1999/5/CE of the European Parliament and the Council.

ALCATEL Mobile 100 Reflexes
ALCATEL Mobile 200 Reflexes
ALCATEL Mobile 200 Ex Reflexes

Any unauthorized modification of the products makes this declaration of conformity null and void. A copy of the original of this declaration of conformity can be obtained by making a written request to:

ALCATEL BUSINESS SYSTEMS
Technical Services - Customer Care
1, rue du Dr. A. Schweitzer
F - 67408 Illkirch - France

**For further information,
visit our web site
www.alcatel.com**

Copyright © ALCATEL 2002. All rights reserved.

Alcatel Business Systems, in keeping with its policy of constant product improvement for the customer, reserves the right to modify product specifications without prior notice.

ALCATEL - 32, avenue Kléber F-92707 Colombes Cedex R.C. Paris 602 033 185

Ref. : 3BA 19601 ENAA Ed. 03

ALCATEL

ARCHITECTS OF AN INTERNET WORLD